 
 
 
 


VOLVO

NKW

FM 12



Typenbezeichnung

Hilfe



E947LC (i.V.)
E947LI

FM 12-340

250 KW

D12C

09/98- 11/01

H200W01
H200W04 (12)
H200WN (10)

H18WK03
H7090WK10 (8)

E496L
E496LS (LS)

E28H (AG)
E10H02 (LH)

FM 12-340

250 KW

D12D

11/01-

H200W01
H200WN (10)
H200W04 (12)
H18W11 (HYDG)
E28H (32) (33) (34)

H200WDK

E496L
E496LS (LS)

T350W (LT)

FM 12-380

279 KW

D12C

09/98- 11/01

H200W01
H200W04 (12)
H200WN (10)

H18WK03
H7090WK10 (8)

E496L
E496LS (LS)

E28H (AG)
E10H02 (LH)

FM 12-380

279 KW

D12D

11/01-

H200W01
H200WN (10)
H200W04 (12)
H18W11 (HYDG)
E28H (32) (33) (34)

H200WDK

E496L
E496LS (LS)

T350W (LT)

FM 12-420

309 KW

D12C

09/98- 11/01

H200W01
H200W04 (12)
H200WN (10)

H18WK03
H7090WK10 (8)

E496L
E496LS (LS)

E28H (AG)
E10H02 (LH)

FM 12-420

309 KW

D12D

11/01-

E28H (32) (33) (34)
H200W01
H200WN (10)
H200W04 (12)
H18W11 (HYDG)

H200WDK

E496L
E496LS (LS)

T350W (LT)

FM 12-460

 
04/03-

H200W01
H200WN (10)

H200WDK

E496L
E496LS (LS)





T350W (LT)



VOLVO

NKW

    FM



Typenbezeichnung

Hilfe

09/05-



E947LC (i.V.)
E947LI

FM 9-300

09/05-

H200WN (10)
H200W04 (39)
H18W11 (HYDG)

H200WDK

E496L
E496LS (LS)

225 KW

D9B300

FM 9-340

09/05-

H200WN (10)
H200W04 (39)
H18W11 (HYDG)

H200WDK

E496L
E496LS (LS)

250 KW

D9B340

FM 9-380

09/05-

H200WN (10)
H200W04 (39)
H18W11 (HYDG)

H200WDK

E496L
E496LS (LS)

280 KW

D9B380

FM 13-360

01/06-

H18W11 (HYDG)
H200WN (10)
H200W04 (39)

H200WDK

E496L
E496LS (LS)

265 KW

D13A360

FM 13-400

09/05-

H200W04 (39)
H200WN (10)
H18W11 (HYDG)

H200WDK

E496L
E496LS (LS)

T350W (LT)

294 KW

D13A400

FM 13-440

09/05-

H200W04 (39)
H200WN (10)
H18W11 (HYDG)

H200WDK

E496L
E496LS (LS)

T350W (LT)

324 KW

D13A440

FM 13-480

09/05-

H200W04 (39)
H200WN (10)
H18W11 (HYDG)

H200WDK

E496L
E496LS (LS)

T350W (LT)

353 KW

D13A480

VOLVO-FM 12



VOLVO



VOLVO-FS 7